NHL-2NA Series Transceivers

Quick Guide

Issue 2 11/02

©Nokia Corporation

Table of Contents

Page No

Install the SIM card and the battery 3
Charge the battery 4
Switching the phone on or off 4
Keys and parts 5
Using the joystick and making a call 6
Copying names and numbers from a SIM card to the phone memory 7
Taking a picture 7
Settings for multimedia messaging 7
Keyguard 8
Shortcuts in standby mode 8
Shortcuts in editors 8
Other shortcuts 9
Further information 9
User's guide..... 9
Setting information..... 9
PC Suite for Nokia 7650 9
Glossary definitions..... 9

 ©Nokia Corporation.

Install the SIM card and the battery

- Keep all miniature SIM cards out of the reach of small children.
- Before removing the cover(s), always switch off the power and disconnect the phone from the charger or any other device. Always store and use the phone with the covers attached.

1 Open the sliding keypad: Take hold of the back part of the phone (marked with green in the figure) and push in the direction of the arrow (1) to open the keypad (2).

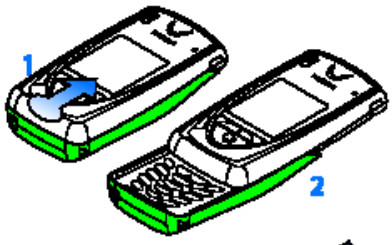

2 Open the Ⓐ cover: With the back of the phone facing you, put your thumb in the middle of the cover (3), slide it in the direction of the arrow, and lift it.

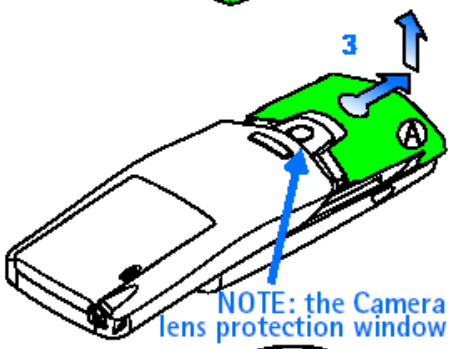

3 Find the SIM card slot (4). Slide the SIM card carefully into the slot (5). Make sure that the bevelled corner on the SIM card is facing outward from the slot and that the golden contact area on the card is facing downwards.

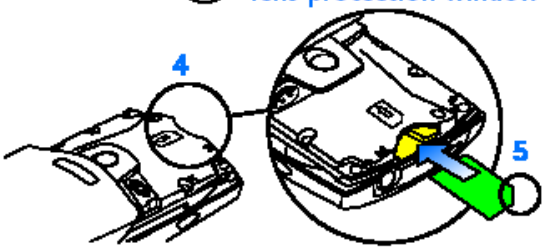

4 Replace the Ⓐ cover (6): Insert the two catches on the sides of the cover into the corresponding slots in the phone and slide the cover until it locks into place.

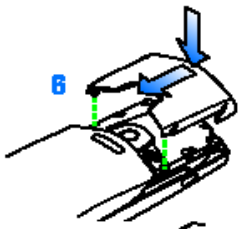

5 Open the Ⓑ cover: Press the locking catch (7) and at the same time slide the cover in the direction of the arrow.

6 Install the battery (8): Align the golden contacts of the battery with the corresponding connectors on the phone, and push the opposite end of the battery until it snaps into place.

7 Replace the Ⓑ cover: Slide the cover back into place.

Charge the battery

1 Connect the lead to the charger. You will hear it click into place.
2 Connect the lead from the charger to the base of the phone (9).
3 Connect the charger to an AC wall outlet. The battery indicator bar starts scrolling. Note, that you can use the phone while charging.
4 When the battery is fully charged, the bar stops scrolling. Disconnect the charger from the AC outlet and then from the phone. See also battery information, p. 126 in the User's Guide.

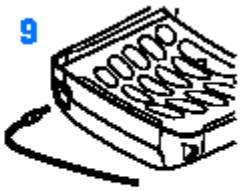

Switching the phone on or off

Press and hold the power key .

WARNING! Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

TIPS ON EFFICIENT OPERATION: Your phone has a built-in antenna. As with any other radio transmitting device, do not touch the antenna unnecessarily when the phone is switched on. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed. Not touching the antenna area during a phone call optimises the antenna performance and the talktime of your phone.

If the phone requests a PIN code:

The PIN code is usually supplied with the SIM card.

- Key in the code (displayed as ****) and press OK.

If the phone requests a security code:

- Key in the security code (displayed as *****) and press OK.

The factory setting for the security code is **12345**. For more information on the access codes, see p. 36 in the User's Guide.

First settings

- Use the number keys 0 - 9 to key in first the current time and then the date. Press OK to accept the settings.

©Nokia Corporation.

Keys and parts

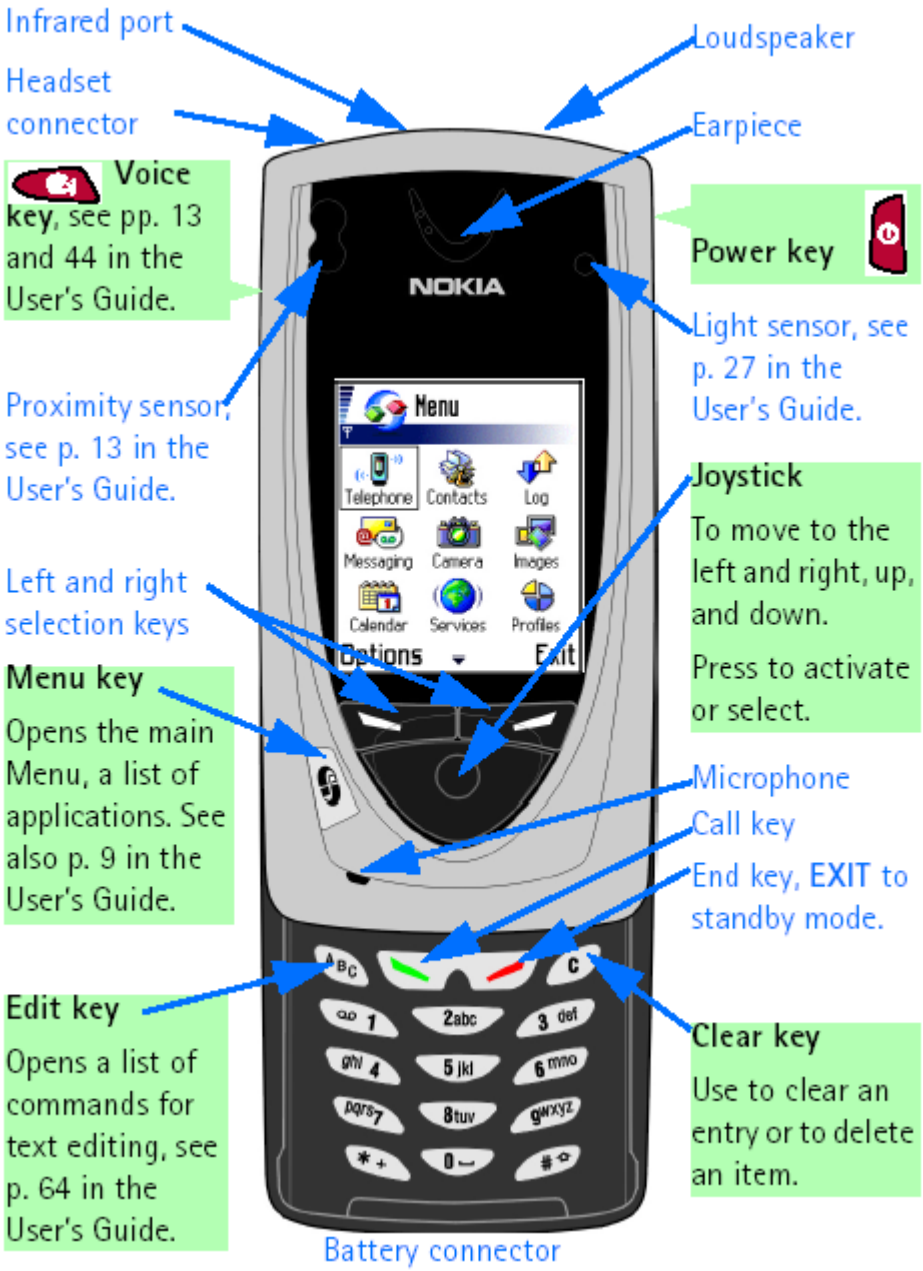

Using the joystick and making a call

Using the joystick

To move the selection on the display, move the joystick to the left, right, up, and down. Press the joystick to open an application, to take a picture, to make selections, changes, or to confirm an operation. For example:

1 To open an Options list, press Options. The small arrow at the bottom of the display (1) indicates if the list contains more items. The lighter the arrow, the less items are left in the list.
2 To scroll down the Options list, move the joystick down. A small arrow to the right (2) indicates a sublist. To open a sublist, move the joystick to the right.
3 To start an action, scroll to a command and press the joystick or press Select.
4 Move the joystick to the right to go to a tab (3), a new page, or view in an application.

Making a call

1 Open the sliding keypad. In standby mode, key in the phone number, including the area code. If you make a mistake, press C to clear numbers.
2 Press and wait for the answer.
3 Press to finish the call (or to cancel the call attempt).

Note: Closing the sliding keypad ends all voice calls and rejects an incoming call (except a waiting call). However, if you during a call press (left selection key) and then close the sliding keypad within few seconds, the call is not ended.

©Nokia Corporation.

Copying names and numbers from a SIM card to the phone memory

If you have stored names and phone numbers on a SIM card, you can copy them to the phone memory.

1 Press (Menu key) to open the main Menu.
2 Use the joystick to move to Contacts.
3 Press the joystick to open Contacts.
4 When you open Contacts for the first time, the phone asks you if you want to copy all your contact data from the SIM card to the phone memory. Press OK.

See also 'Copying contacts between the SIM card and phone memory', p. 42 in the User's Guide.

Taking a picture

Note: Obey all local laws governing the taking of pictures. Do not use this feature illegally.

1 Open the sliding keypad and press Camera in standby mode. The Camera application opens and you can see the view to be captured.
2 Press the joystick to take a picture.

Note: Do not move the phone before the Camera application starts to save the photo. The photos are saved automatically in the Images application.

After the image has been saved:

- If you do not want to save the photo in the Images application press Delete.
- To take a new picture, press the joystick to return to the viewfinder.

For more information, see Camera and Images, p. 50 in the User's Guide.

Settings for multimedia messaging

When you are sending a multimedia message to any other phone than Nokia 7650, it is recommended to use a smaller image size and a sound clip that is no longer than 15 seconds. The default setting is *Image Size*: *Small*. When sending a multimedia message to an e-mail address or another Nokia 7650, if possible, use image size *Large* (network dependent). For further information, see User's Guide, p. 66.

©Nokia Corporation.

Keyguard

Use the keyguard (keypad lock) to prevent the keys from being accidentally pressed.

To lock: Close the sliding keypad and press Yes. To lock the keys when the sliding keypad is closed, press (power key) briefly and select Lock keys. When the keys are locked, appears on the display. **To unlock**: Open the sliding keypad or press Unlock and then OK.

When the keyguard is on, to answer a call, press Answer. During a call, the phone can be operated in the normal way.

Note: When Keyguard is on, calls may be possible to the emergency number programmed into your phone (e.g. 112 or other official emergency number). Open the sliding keypad and key in the emergency number and press . The number is displayed only after you have keyed in its last digit.

Shortcuts in standby mode

- Press (Menu key) to open the main Menu.
- Press the joystick to open Contacts.
- Press to open a list of the last dialled numbers. Move the joystick to the left to view received and missed calls lists.
- To change the profile, press (power key) briefly and select the profile.
- Press and hold (voice key) to start voice dialling. See p. 44 in the User's Guide.
- Press and to call your voice mailbox. See p. 17 in the User's Guide.

Shortcuts in editors

- Press (Edit key) to open a list of commands related to writing and editing text. Press to switch between predictive, traditional text input and number mode (*Dictionary*→ *Dictionary on*, *Alpha mode*, *Number mode*).
- When you are writing, press repeatedly to access different kinds of special characters, or press to open a list of special characters. Press to enter a space.
- You can also use to mark items. Press and hold and at the same time, move the joystick to mark text to be copied or erased.

©Nokia Corporation.

Other shortcuts

- When you have an active phone call, press (voice key) briefly to change to loudspeaker mode. See p. 13 in the User's Guide.
- In the main Menu, press and hold (Menu key) to open a view where you can see all the applications that are open and switch between them. See also p. 9 in the User's Guide.

Further information

Note! Please refer to the user guide of the product for instructions on operation, care and maintenance, including important safety information.

User's guide

Read the "General Information" chapter in the User's Guide to get familiar with your phone.

Setting information

For more information on data connection settings, see p. 29 in User's Guide.

For messaging settings, see p. 81 in User's Guide.

PC Suite for Nokia 7650

The PC Suite for Nokia 7650 Installation Guide can be found on the CD-ROM supplied in the sales package.

Glossary definitions

You can find references to glossary definitions in the Index of the User's Guide.

Support on the Internet

http://www.club.nokia.com/

http://www.nokia.com/phones/

©Nokia Corporation.

 ©Nokia Corporation.